
The all-new



The DWX-51D dental mill is designed with you in mind, delivering smart and effortless milling with the highest-quality results.



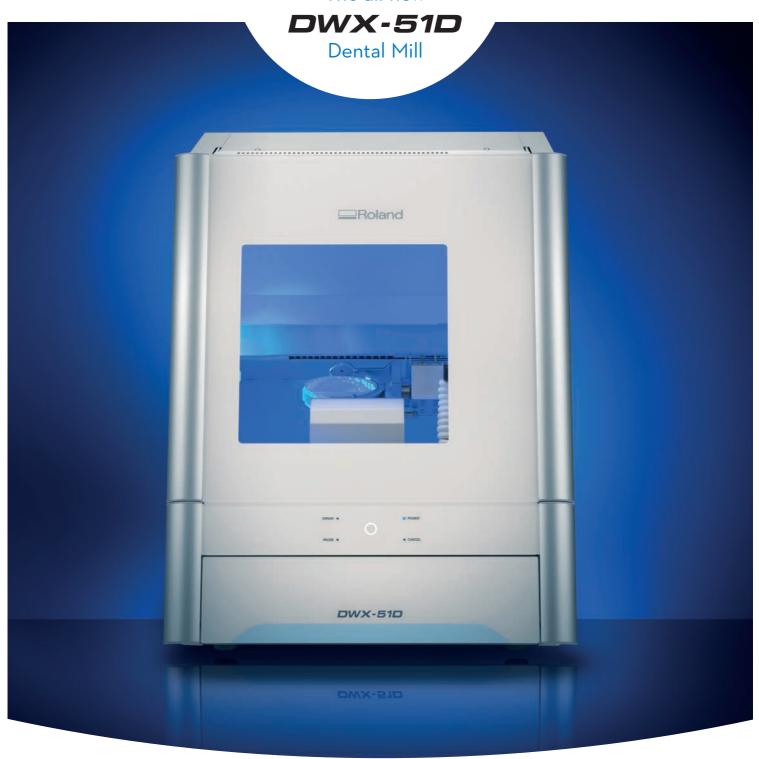

DWX-51D 5-Axis Dental Milling Machine

The DWX-51D is designed for effortless, precision production of dental prosthetics from copings, crowns and bridges to inlays, onlays and abutments, etc. With a host of automated features and a clean, stable work environment, the DWX-51D is the perfect solution for labs wanting to increase production or those looking to get into digital milling for the first time.

Built-for-You and Built-to-Last

It's no accident that the DWX-51D has all the advanced and easy features that a lab technician is looking for in a production mill. After years of extensive research in which users were asked what they needed, the DWX-51D was developed to enhance user experience, make milling less complicated and improve output quality, all with the reliability Roland DG machines are known for.





Quick Set-up and Clean Operation

A new C-clamp reduces misalignment issues by providing exact work piece alignment, requiring the tightening of just two screws during material installation. The DWX-51D also has a unique airflow with a powerful vacuum to reduce dust, while an ionizer removes static when milling PMMA.

Economical Open Architecture

The open architecture of the DWX-51D allows you to work with the latest materials, CAD/CAM software and scanners, without needing to rely on a single source.

















Connect up to four Roland DG DWX milling machines to one computer for even greater productivity.





Fast, Efficient and User-Friendly 5-Axis Machining

The DWX-51D is designed so virtually any user can become an expert overnight. A variety of advanced and ease-of-use features to ensure continuous and accurate milling include:

- · Sturdy frame ensures stability, while slim fit design fits nearly any lab space
- · Steady and efficient ball screw-driven operation
- · Complex milling of block and disc materials
- · 5-axis capability allows milling of complex prosthetics and full mouth restorations
- 10-station Automatic Tool Changer (ATC)
- · Includes storage drawer to properly store and protect tools
- · Color-coded LED status lights signal current job progress
- User friendly VPanel tracks tool life, calibrates and starts milling from your desktop





Flexible DWX Milling Solutions

Run the DWX-51D and DWX-4W side-by-side for the most flexible and productive dry and wet milling solution. Using separate dry and wet DWX devices gives you the confidence to take on the maximum amount of glass ceramics and zirconia restorations without the need for backand-forth set-up and cleaning of a single machine.







DWX-4W

Peace-of-Mind, Reliability and Support

The DWX-51D offers unmatched reliability and post-sales support that includes a two year warranty. We also provide online video, educational support and certified service engineers to keep your machine running smoothly.

DWX-51D Highlights:

- 5-axis simultaneous milling
- Produce zirconia, wax, PMMA, composite resin, PEEK and gypsum restorations
- · Automatic 10-station Tool Changer for continuous production
- · Includes 9 pin-type material adapter
- · Precision ball screw-driven system
- · New C-clamp for easy adjustment and alignment
- · Powerful vacuum and anti-static ionizer for clean calibration and dust reduction
- · Sturdy frame for stable milling
- · Colored LED machine status light
- · Convenient tool storage drawer
- · Industry-best warranty and post-sale support
- 2 year trouble-free warranty
- Made in Japan



SPECIFICATIONS		
Cuttable material	Zirconia, Wax, PMMA, Composite Resin, PEEK, Gypsum	
Loadable workpiece shape	Disk type (with step) Pin type	Step section: 98.5 mm (diameter), height 10mm
		Body section: 95 mm (diameter), height max. 60mm Pin diameter: 6 mm
Operating speed	XYZ axis: 0.24 to 70.9 in./min. (6 to 1800 mm/min.)	
Spindle motor	Brushless DC motor	
Spindle speed	6,000 to 30,000 rpm	
Rotary axis travel angle	A: ± 360° B: ± 30°	
Number of burs housed	10	
Attachable bur	Shank diameter: 4 mm, length: 40 to 55 mm	
Compatible compressed air	0.02 to 0.2 MPa	
Interface	USB	
Control command set	RML-1, NC code	
Power requirements	AC 100 to 240 V ±10%, 50/60 Hz , 2.0 A (overvoltage category II, IEC 60664-1)	
Power consumption	Approx. 200 W	
Operating noise	During operation: 70 dB (A) or less (when not cutting), during standby: 45 dB (A) or less	
External dimensions	Width x depth x height: 19.5 × 26.0 × 23.6 in. (495 × 660 × 600 mm)	
Weight	67 kg (147.7 lbs.)	
Installation environment	Indoor use at altitudes up to 6,562 ft. (2,000 m) Temperature: 41 to 104 °F (5 to 40 °C), humidity: 35 to 80% (no condensation) Ambient pollution degree: 2 (as specified by IEC 60664-1) Short-term temporary overvoltage: 1440 V Long-term temporary overvoltage: 490 V	
Included items	Power cord, USB cable, Regulator, Air hose, Pin-type material adapter, Automatic correction jig, Detection pin, Torque screwdriver, Milling bur holders, Mounting screws, Hexagonal screwdriver, T-shaped hexagonal screwdriver, Dust collection hoses, Dust collection hose adapter, spanner, Roland Software Package CD, Torque screwdriver, Ferrite core, Manuals	
System requirements for USB connection	Windows Vista® or Windows® 7/8/8.1/10 (32 or 64 bit) operating system, plus included USB cable	



The Roland Easy Shape logo symbolizes the Company's philosophy in the dental industry. High-level products, first quality materials, and sophisticated, cutting-edge technologies combine to create the finest dental milling devices and precision results for your lab.

Roland DG reserves the right to make changes in specifications, materials or accessories without notice. Actual device output may vary. For optimum output quality, periodic maintenance to critical components may be required. Please contact your Roland DG dealer for details. No guarantee or warranty is implied other than expressly stated. Roland DG shall not be liable for any incidental or consequential damages, whether foreseeable or not, caused by defects in such products.

Three-dimensional shapes may be protected under copyright. All trademarks are the property of their respective owners. Reproduction or use of copyrighted material is governed by local, national, and international laws. Customers are responsible for observing all applicable laws and are liable for any infringement.

Roland DG Corporation has licensed the MMP technology from the TPL Group. Roland, and Easy Shape logo are registered in the U.S. Patent and Trademark Office.

Get social with us.











